

Внимание! Устройство iComrFK выводит информацию на приборную панель через навигационные подсказки.

Если у вас не было с завода навигации, то необходимо активировать ее в приборной панели.

Нужно UCDS/ELS27/ELM327hs+ms + forscan и т.п.

Если возникли трудности пишите в телегу @dizz74 , нужен будет VIN

В Центральной конфигурации CCC(Asbuilt):

172 пункт – значение 9(пункт with Nav).

Пример UCDS


ID	Name	Value	Hex
163	Lap belt pretensioner front - N/A	Not Recognized	00
164	Front crash sensing system - N/A	Not Recognized	00
165	Adaptive front ventilation - N/A	Not Recognized	00
166	Front door warning lamps	Less Front Door Warning Lamps	01
167	Electronic park brake stall apply	Not Recognized	00
168	Electronic park brake key out apply	Not Recognized	00
169	Electronic park brake drive away release	Not Recognized	00
170	Battery saver time	Not Recognized	00
171	Heated steering wheel - N/A	Not Recognized	00
172	FRONT CENTRE MOUNTED DISPLAY	With Display - Touchscreen, Colour-TFT, DM8 with Nav	09
173	Rear entertainment system	Not Recognized	00
174	My connected world - N/A	Not Recognized	00
175	Speech control language	Not Recognized	00
176	Key code	Not Recognized	00
177	Self opening boot / tailgate	Self Opening Tailgate	03
178	Shift indication	With Shift Indication	02

Info: File successfully opened correct Asbuilt file

И в Direct Config IPC в 2 двух местах:

Панель Focus 3 (дорест)

DE04 : пункт Navigation repeater

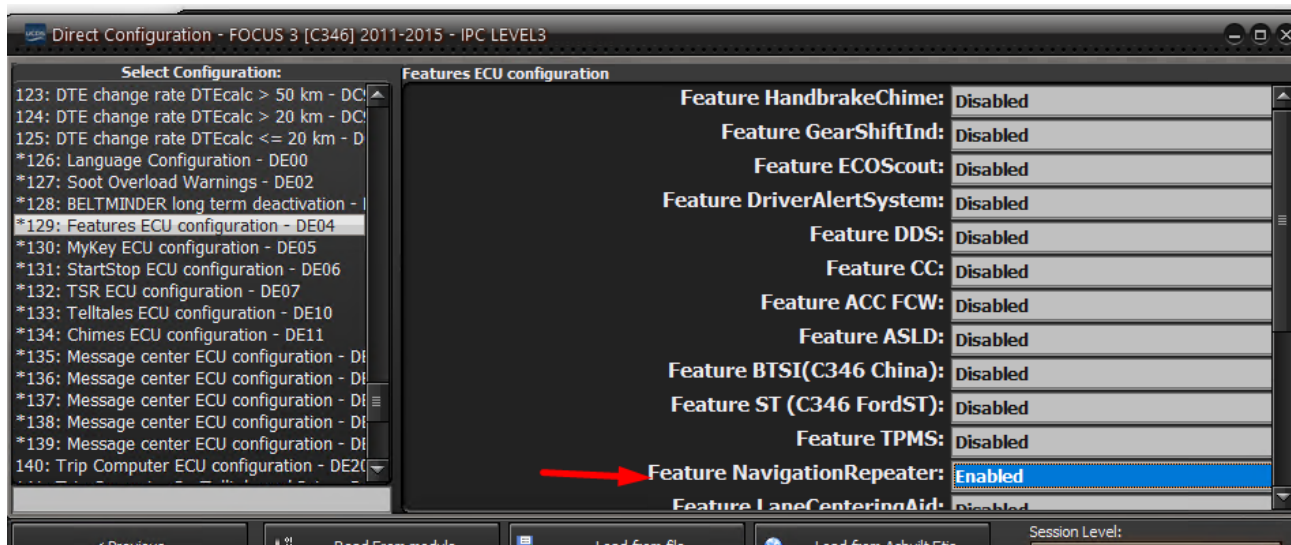

DE22: NavInfo

The screenshot displays the 'Direct Configuration' software interface for a 'FOCUS 3 [C346] 2011-2015 - IPC LEVEL3'. The main window is titled 'Driver Settings ECU configuration'. On the left, a 'Select Configuration:' list shows various ECU configurations, with '*142: Driver Settings ECU configuration - DE' selected. A red arrow points from this selection to the 'DS NavInfo: Enabled' entry in the main configuration list. The main list contains the following items:

- DS ECU OnOff: Enabled
- DS MeyKeysProgrammed: Enabled
- DS MyKeyMiles: Enabled
- DS Alarm: Enabled
- DS Parkheater: Enabled
- DS AuxHeater: Enabled
- DS NavInfo: Enabled**
- DS Compass: Enabled
- DS HomeLight: Enabled
- DS Dimming: Enabled
- DS AmbientLight: Enabled
- DS MeasureUnitsFE: Enabled
- DS TSR OverSpeedWarning: Enabled

At the bottom of the interface, there are several control buttons: '< Previous', 'Read From module', 'Load from file', 'Load from Asbuilt Etis', 'Write to Module', 'Save to file', and 'Reset module'. On the right side, there are dropdown menus for 'Session Level:' (set to 'Auto') and 'Security Level:' (set to 'Auto').