

Внимание! Устройство iComrFK выводит информацию на приборную панель через навигационные подсказки.

Если у вас не было с завода навигации, то необходимо активировать ее в приборной панели.

Нужно UCDS/ELS27/ELM327hs+ms + forscan и т.п.

Если возникли трудности пишите в телегу @dizz74 , нужен будет VIN

В Центральной конфигурации CCC(Asbuilt):

172 пункт – значение 9(пункт with Nav).

Пример UCDS


ID	Name	Value	Hex
163	Lap belt pretensioner front - N/A	Not Recognized	00
164	Front crash sensing system - N/A	Not Recognized	00
165	Adaptive front ventilation - N/A	Not Recognized	00
166	Front door warning lamps	Less Front Door Warning Lamps	01
167	Electronic park brake stall apply	Not Recognized	00
168	Electronic park brake key out apply	Not Recognized	00
169	Electronic park brake drive away release	Not Recognized	00
170	Battery saver time	Not Recognized	00
171	Heated steering wheel - N/A	Not Recognized	00
172	FRONT CENTRE MOUNTED DISPLAY	With Display - Touchscreen, Colour-TFT, DM8 with Nav	09
173	Rear entertainment system	Not Recognized	00
174	My connected world - N/A	Not Recognized	00
175	Speech control language	Not Recognized	00
176	Key code	Not Recognized	00
177	Self opening boot / tailgate	Self Opening Tailgate	03
178	Shift indication	With Shift Indication	02

Info: File successfully opened correct Asbuilt file

И в Direct Config IPC в 2 двух местах:

Панель Focus 3 (рест)

DE1B : пункт Navigation repeater

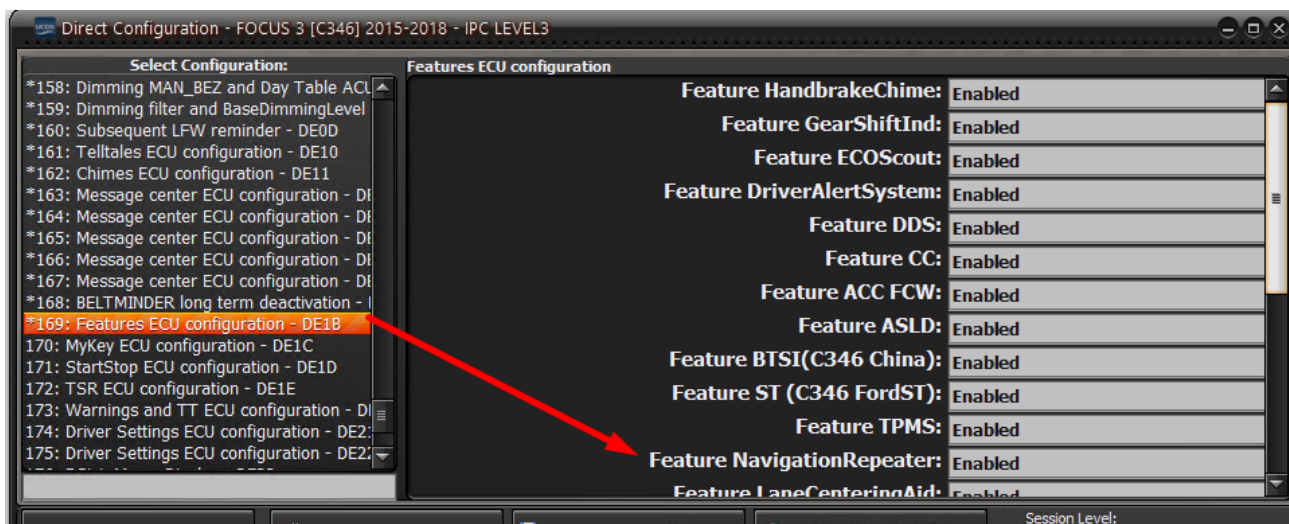

DE22: NavInfo

The screenshot displays the 'Direct Configuration - FOCUS 3 [C346] 2015-2018 - IPC LEVEL3' window. On the left, a 'Select Configuration:' list shows various ECU configurations, with '174: Driver Settings ECU configuration - DE22' selected. The main area, titled 'Driver Settings ECU configuration', lists several parameters, all of which are set to 'Enabled'. A red arrow points to the 'DS NavInfo: Enabled' entry.

Parameter	Value
DS MeyKeysProgrammed	Enabled
DS MyKeyMiles	Enabled
DS Alarm	Enabled
DS Parkheater	Enabled
DS AuxHeater	Enabled
DS NavInfo	Enabled
DS Compass	Enabled
DS HomeLight	Enabled
DS Dimming	Enabled
DS AmbientLight	Enabled
DS MeasureUnitsFE	Enabled
DS TSR OverSpeedWarning	Enabled
DS TSR	Enabled

At the bottom of the window, there are buttons for '< Previous', 'Read From module', 'Load from file', and 'Load from Asbuilt Etis', along with a 'Session Level:' indicator.